


PAC 8 SYSTEM WIRING DIAGRAM

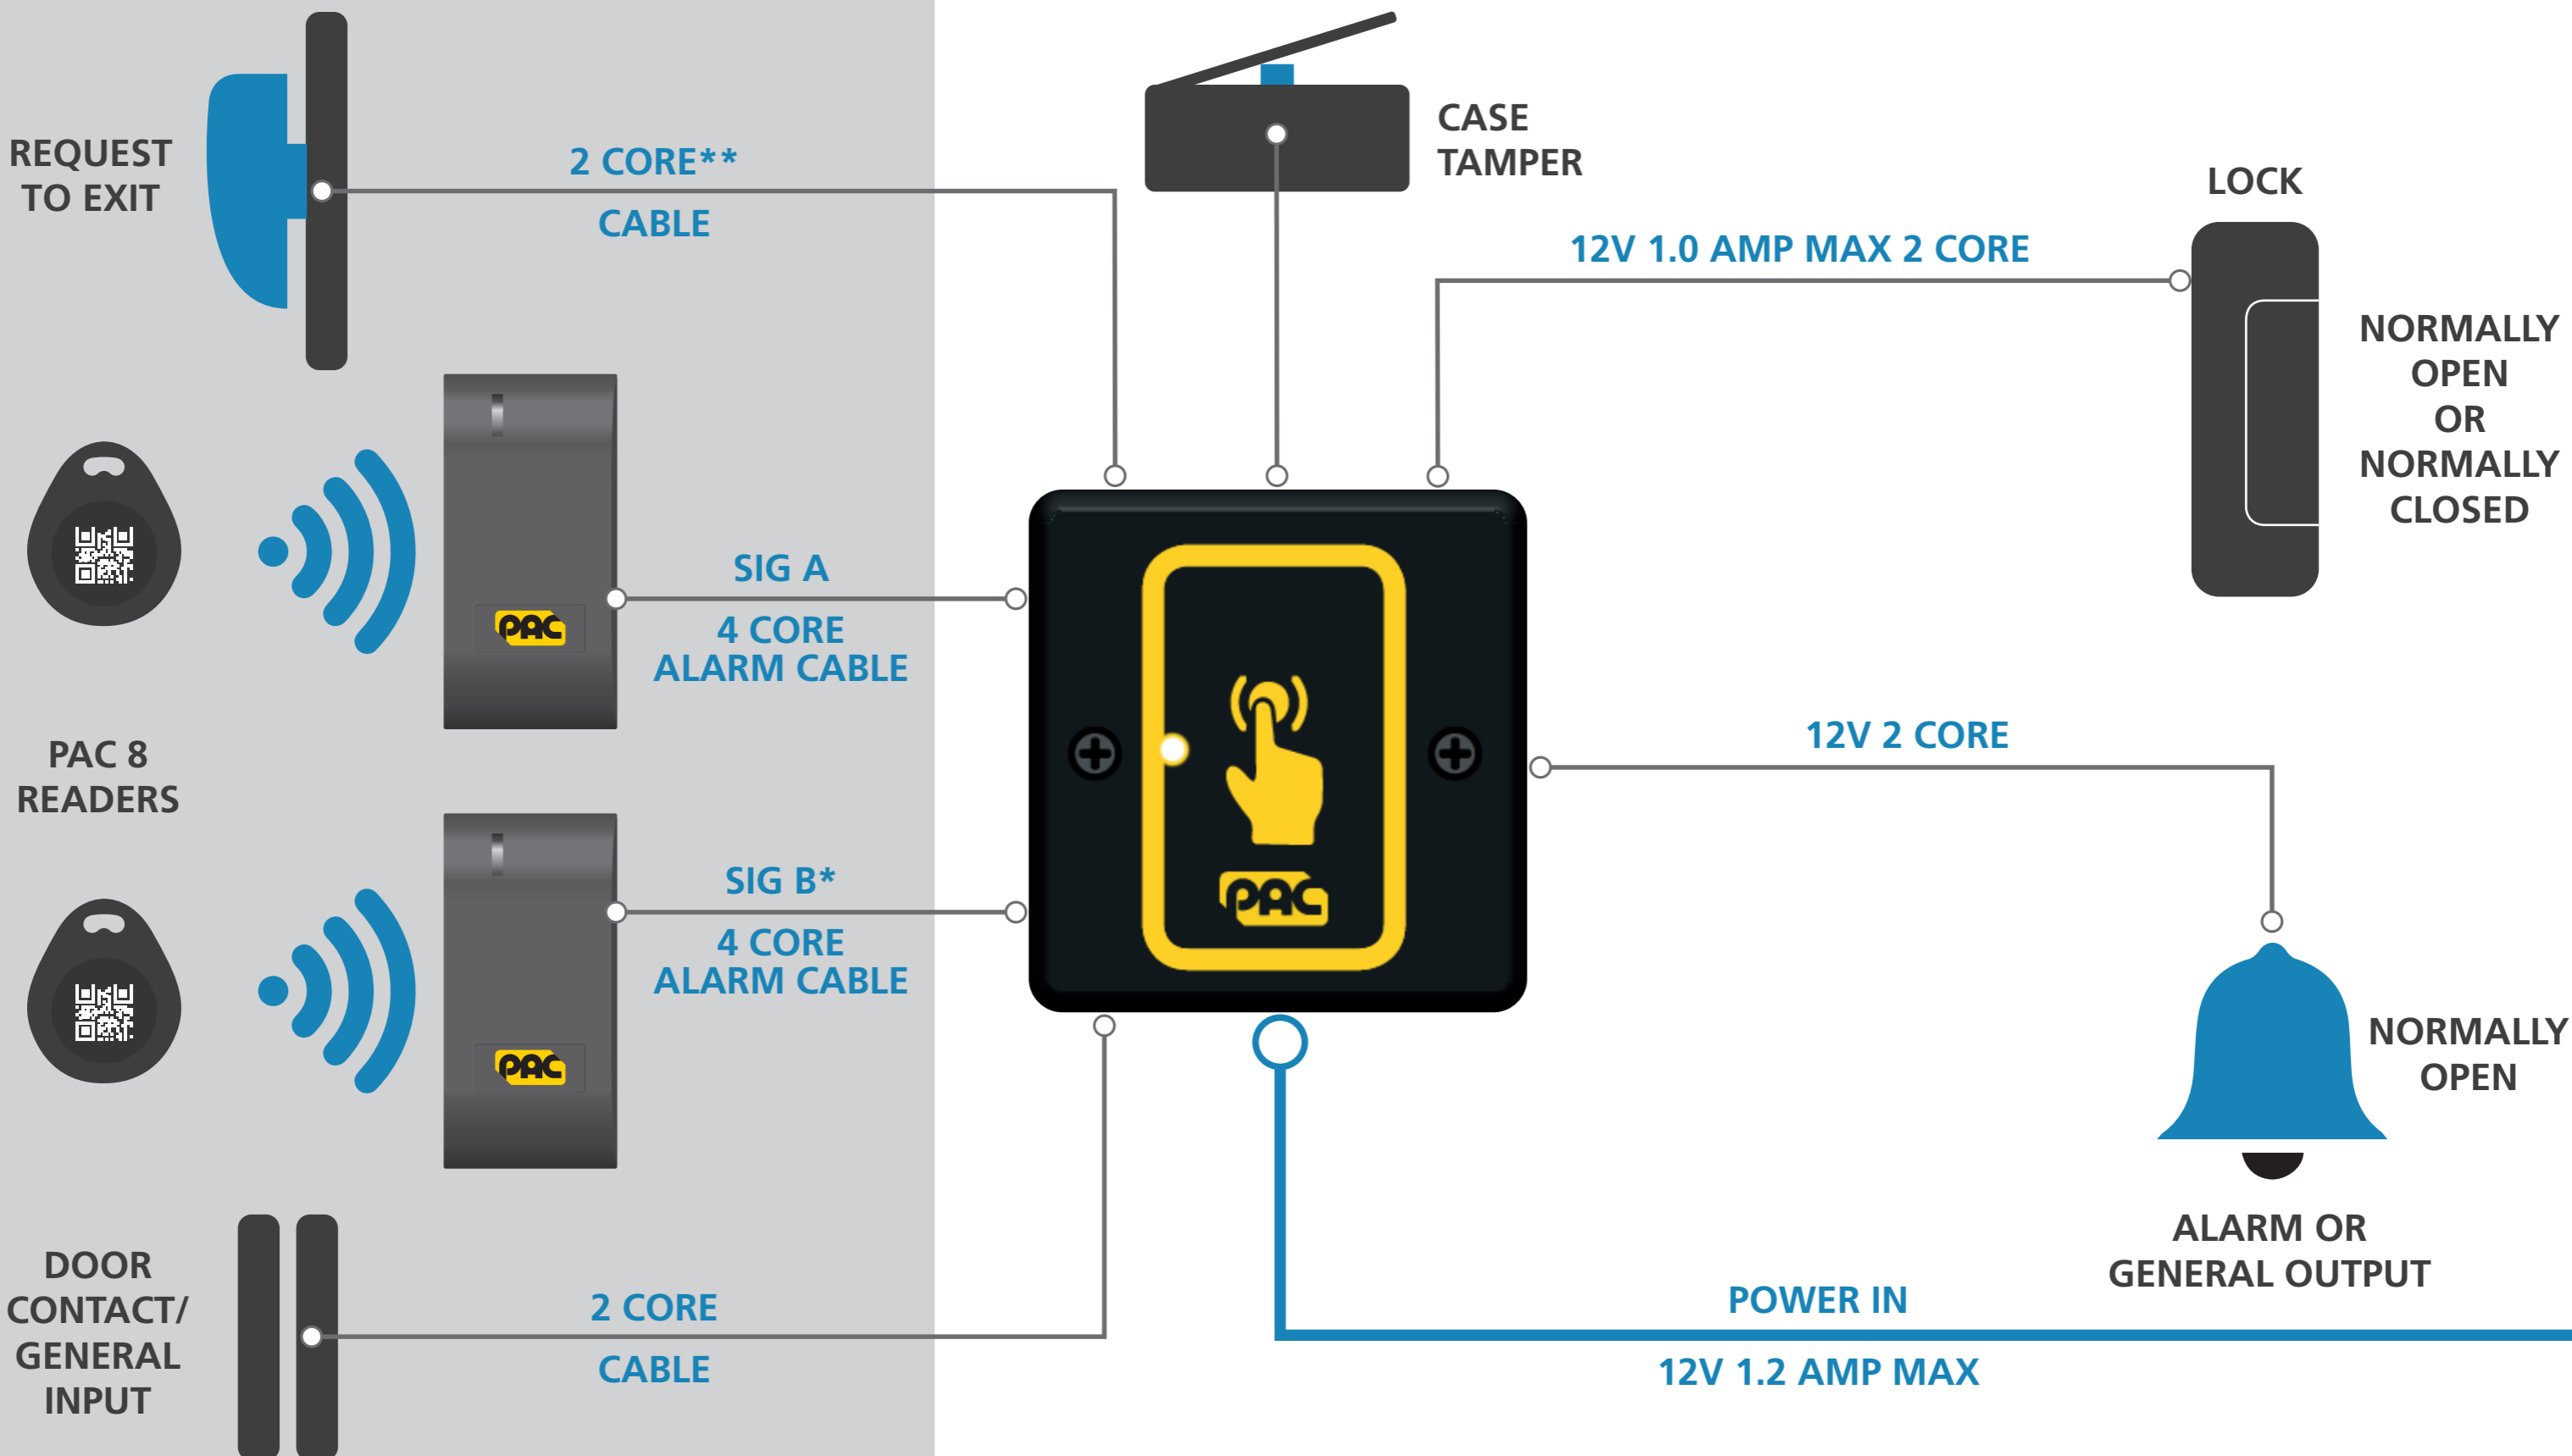

* If the 2nd reader is being used, then the Request-To-Exit (RTE) connection is not required.

** External RTE is only required if the built-in contact RTE on the controller is not being used.